



USER MANUAL

— Longo Modbus Products
LMP-1.CA1M
Card Access module

Version 1



Written by SMARTEH d.o.o.
Copyright © 2020, SMARTEH d.o.o.

User Manual

Document Version: 1
January, 2020



STANDARDS AND PROVISIONS: Standards, recommendations, regulations and provisions of the country in which the devices will operate, must be considered while planning and setting up electrical devices. Work on 100 .. 240 V AC network is allowed for authorized personnel only.

DANGER WARNINGS: Devices or modules must be protected from moisture, dirt and damage during transport, storing and operation.

WARRANTY CONDITIONS: For all modules LONGO LMP-1 - if no modifications are performed upon and are correctly connected by authorized personnel - in consideration of maximum allowed connecting power, warranty of 24 months is valid from the date of sale to the end buyer, but not more than 36 months after delivery from Smarteh. In case of claims within warranty time, which are based on material malfunctions the producer offers free replacement. The method of return of malfunctioned module, together with description, can be arranged with our authorized representative. Warranty does not include damage due to transport or because of unconsidered corresponding regulations of the country, where the module is installed.

This device must be connected properly by the provided connection scheme in this manual. Misconnections may result in device damage, fire or personal injury.

Hazardous voltage in the device can cause electric shock and may result in personal injury or death.

NEVER SERVICE THIS PRODUCT YOURSELF!

This device must not be installed in the systems critical for life (e.g. medical devices, aircrafts, etc.).

If the device is used in a manner not specified by the manufacturer, the degree of protection provided by the equipment may be impaired.

Waste electrical and electronic equipment (WEEE) must be collected separately!

LONGO LMP-1 complies to the following standards:

- EMC: EN 61000-6-3:2007 + A1:2011, EN 61000-6-1:2007, EN 61000-3-2:2006 + A1:2009 + A2: 2009, EN 61000-3-3:2013
- LVD: IEC 61010-1:2010 (3rd Ed.), IEC 61010-2-201:2013 (1st Ed.)

Smarteh d.o.o. operates a policy of continuous development. Therefore we reserve the right to make changes and improvements to any of the products described in this manual without any prior notice.

MANUFACTURER:

SMARTEH d.o.o.
Poljubinj 114
5220 Tolmin
Slovenia





Index

Longo Modbus Products LMP-1.CA1M

| | |
|-----------------------------------|----|
| 1 DESCRIPTION..... | 1 |
| 2 FEATURES..... | 2 |
| 3 OPERATION..... | 3 |
| 3.1 Modbus RTU variables..... | 4 |
| 4 INSTALLATION..... | 6 |
| 4.1 Connection scheme..... | 6 |
| 4.2 Mounting frame selection..... | 8 |
| 4.3 Mounting instructions..... | 9 |
| 4.4 Module labeling..... | 10 |
| 5 TECHNICAL SPECIFICATIONS..... | 11 |
| 6 CHANGES | 12 |
| 7 NOTES..... | 13 |





1 DESCRIPTION

LMP-1.CA1M RFID reader is intended to be used as an identity verification device at room entrance. Module also provides display for four different messages and requests, usually activated from other module inside the room. This messages are convenient to notify personnel (e.g. occupied, do not disturb, SOS, room service).

When RFID tag (key-card) is approached to the reader, the green LED blinks and a short beep is generated if code is successfully read out. In case key-card for correspondent room is valid, the green LED blinks again and a short beep is generated. Other devices can be activated at this event like door lock opening, turning light on... If the ID card number is not valid, the red LED blinks and a longer beep is generated.

In case other (magnet or contact-chip) card system is used for door unlock, LMP-1.CA1M module can be used only to show messages.

LMP-1.CA1M module can be modified on customer request: custom front label, touch buttons added, LEDs added, housing colour. Please contact manufacturer for more information.

LMP-1.CA1M reads unique ID (UID) from standard ISO/IEC 14443 A/MIFARE.



2 FEATURES

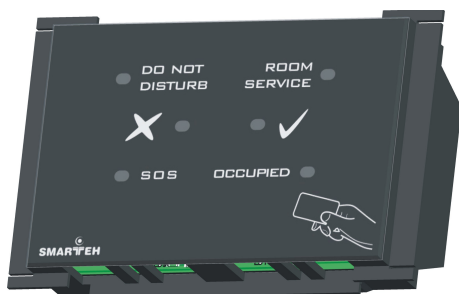


Figure 1: LMP-1.CA1M module.

Table 1: Features

RFID reader

LEDs for showing activated messages & requests: occupied, do not disturb, room service, SOS

OK “✓” LED

FAULT “X” LED

Power LED

Internal fault LED

Internal built-in buzzer





3 OPERATION

Operation of the CA1M module is also dependent on parameters received on Modbus RTU communication channel.

Reader RFID field is active always when module is powered up. If tag is put inside RFID field, reader tries to resolve RFID tag code. If code is read successfully, module activates status *iIDNew*, generates a short beep, OK LED4 blinks and code is transmitted in *iIDW1* - *iIDW4* status fields. In main module application this code can be read out and authenticated. If code has appropriate rights, main module should activate *idCodeOK* command. If code is not authorized, main module application should activate *idCodeFault* command. Regarding command received, following action are triggered on module:

| | | |
|--------------------|-----|------------------------------|
| <i>idCodeOK</i> | ==> | OK LED4 blink, short beep. |
| <i>idCodeFault</i> | ==> | FAULT LED3 blink, long beep. |

Either command is received or not from main module application within 10 seconds, module clears *iIDNew* status and waits for next RFID tag. While CA1M module is waiting for authorization response, new RFID tags can not be read.

To check if communication is running, master toggles *oCommToggleBit* and then reads if *iCommToggleBit* was toggled.





3.1 Modbus RTU variables

Do not use poll times smaller than 200 ms and greater than 4 s.

Table 2: 4xxxx, Holding registers

| Reg. | Name | Description | Raw → Engineering data |
|------|---------------------|-------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 90 | oSaveModbusSettings | Save EEPROM settings; change the value from 0 to 12345 to save settings | 0, 12345 |
| 98 | mbSlaveAddressMem | Modbus Slave Address | 1 .. 247 → 1 ..247 |
| 99 | mbBaudrateMem | Modbus Baudrate | 1 → 600 bps 2 → 1200 bps 3 → 2400 bps 4 → 4800 bps 5 → 9600 bps 6 → 14400 bps 7 → 19200 bps 8 → 38400 bps 9 → 56000 bps 10 → 57600 bps 11 → 115200 bps other → 19200 bps (default) |
| 100 | mbParityMem | Modbus Parity | 0 → none 1 → even (default) 2 → odd other → none |

Table 3: 3xxxx, Input registers

| Reg. | Name | Description | Raw → Engineering data |
|------|-----------|-------------------------|--------------------------------------------------------|
| 1 | iIDW1 | RFID ID received word 1 | 0 .. 65535 → 0 .. 65535 |
| 2 | iIDW2 | RFID ID received word 2 | 0 .. 65535 → 0 .. 65535 |
| 3 | iIDW3 | RFID ID received word 3 | 0 .. 65535 → 0 .. 65535 |
| 4 | iIDW4 | RFID ID received word 4 | 0 .. 65535 → 0 .. 65535 |
| 6 | iIDLength | Lenght of ID code | 0 → ID code not received 4 → 4 bytes 7 → 7 bytes |
| 98 | iFWver | Software version | 0 .. 65535 → 0 .. 65535 |
| 99 | iHWver1 | Hardware version 1 | 0 .. 65535 → 0 .. 65535 |
| 100 | iHWver2 | Hardware version 1 | 0 .. 65535 → 0 .. 65535 |



**Table 4: 0xxxx, Coils**

| Reg. | Name | Description | Raw → Engineering data |
|------|------------------|--------------------------------------|------------------------------------------------|
| 1 | oIDNewBeepDis | Disable beep when new ID is detected | 0 → Enabled 1 → Disabled |
| 2 | oBuzz | Set/Reset Buzzer | 0 → Reset 1 → Set |
| 3 | oIDCodeFault | ID code Fault confirm | 0 → Fault not confirmed 1 → Fault confirmed |
| 4 | oIDCodeOK | ID code OK confirm | 0 → OK not confirmed 1 → OK confirmed |
| 5 | oIDFaultLedCmd | Set/Reset Fault LED | 0 → Reset 1 → Set |
| 6 | oIDOKLedCmd | Set/Reset OK LED | 0 → Reset 1 → Set |
| 7 | oLedOccupied | Set/Reset Occupied LED | 0 → Reset 1 → Set |
| 8 | oLedDoNotDisturb | Set/Reset Do not disturb LED | 0 → Reset 1 → Set |
| 9 | oLedRoomService | Set/Reset Room service LED | 0 → Reset 1 → Set |
| 10 | oLedSOS | Set/Reset SOS LED | 0 → Reset 1 → Set |
| 11 | oCommToggleBit | Communication toggle bit loop | 0, 1 |

Table 5: 1xxxx; Discrete inputs

| Reg. | Name | Description | Raw → Engineering data |
|------|----------------|-----------------------------------------|------------------------------------------------|
| 1 | iCommToggleBit | Communication toggle bit loop indicator | 0, 1 |
| 2 | iIDNew | New ID detected | 0 → New ID not detected 1 → New ID detected |



4 INSTALLATION

4.1 Connection scheme

Figure 2: Connection scheme

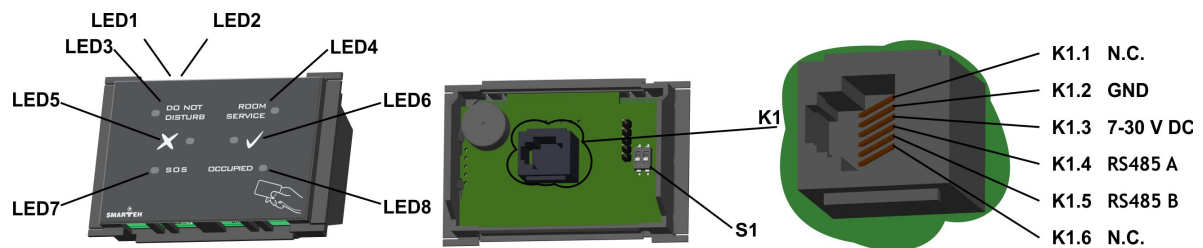
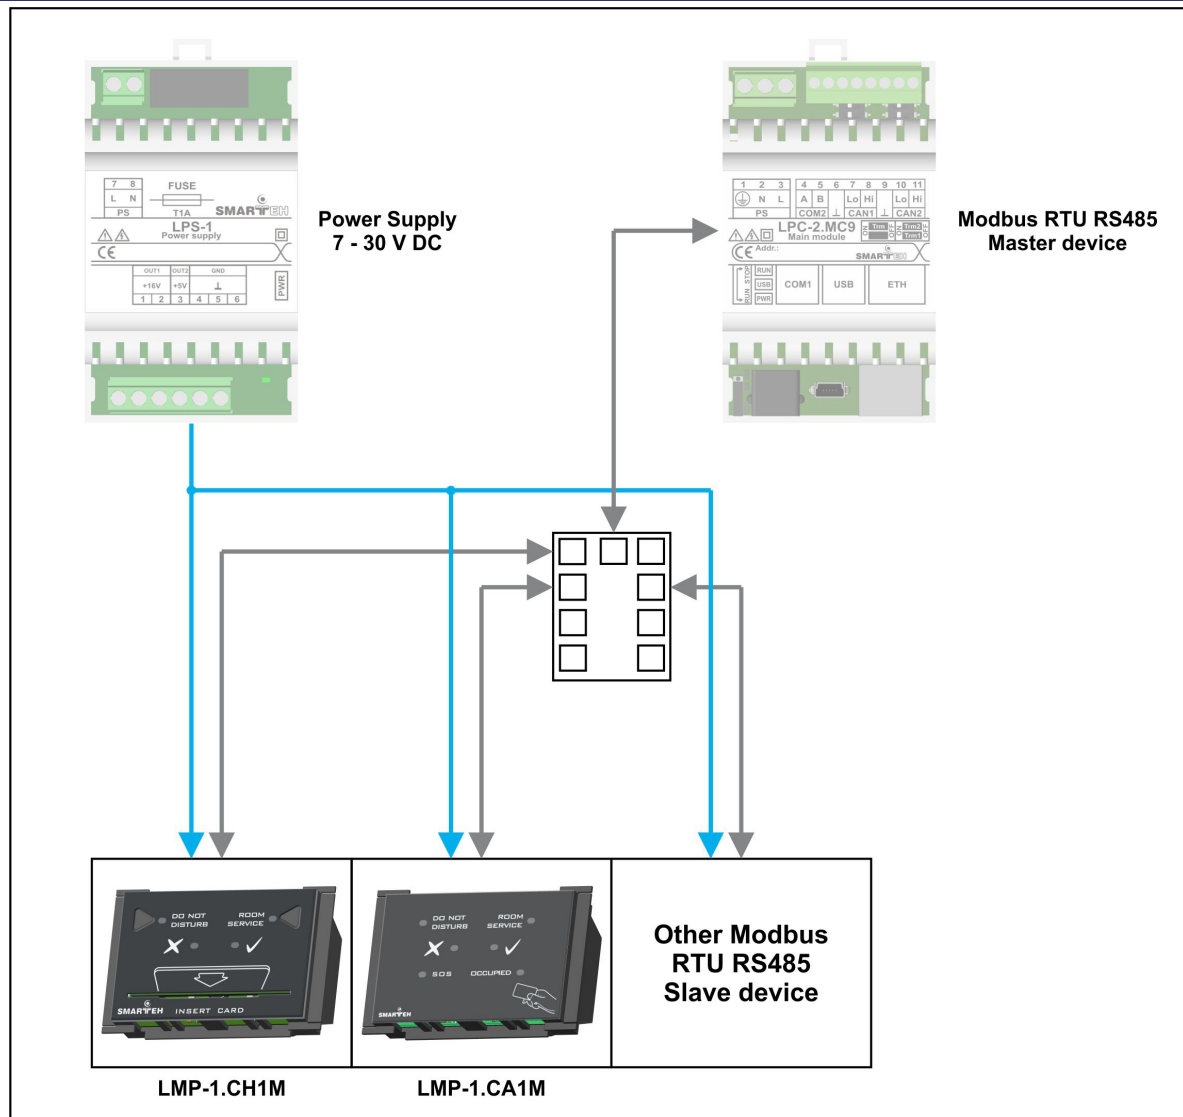


Table 6: K1

| | | |
|------|-------------------|--------------------------|
| K1.1 | N.C. | Not connected |
| K1.2 | GND | Ground |
| K1.3 | 7 .. 30 V DC | Power supply input |
| K1.4 | Standard RS-485 A | Data receive/send line A |
| K1.5 | Standard RS-485 B | Data receive/send line B |
| K1.6 | N.C. | Not connected |

Table 7: LEDs & Buttons

| | | |
|-------------|----------------|-------------------------------------------------------------------------------|
| LED1: red | Communication | On: RS-485 communication fault Off: RS-485 communication OK |
| LED2: green | Power supply | On: power supply OK Off: power supply missing or power off |
| LED3: blue | Do not disturb | On: request active Off: no request |
| LED4: blue | Room service | On: request active Off: no request |
| LED5: red | FAULT “ X ” | On: RFID key standard NOK or ID card number wrong Off: No tag in proximity |
| LED6: green | OK “ √ ” | On: RFID key standard OK and ID card number valid Off: No tag in proximity |
| LED7: blue | SOS | On: request active Off: no request |
| LED8: blue | Occupied | On: request active Off: no request |

Table 8: S1

| SELECTOR | Switch 1 | Switch 2 |
|--------------------------------------------------------------------------|----------|----------|
| User settings, from Modbus RTU registers | OFF | OFF |
| Not used | OFF | ON |
| Not used | ON | OFF |
| Default factory settings active, 19200bps/8 data bits/1 stop bit/EVEN | ON | ON |



4.2 Mounting frame selection

Frame, suitable for CA1M module insertion, should be modular one at least 3 gang wide. Be careful to have corresponding flush-mounting box provided on the place where module will be positioned.

SmarteH has verified following lines to be compatible with LMP-1.CA1 module:

- Bticino - Living, Light
- Gewiss - Playbus, System
- Vimar - Plana, Idea
- Tem - Modul Soft, Modul Line
- Master

Frames of other vendors most probably suits as well, but they were not verified by Smarteh. Before installation verify compatibility of non listed frames.

Module housing has a fin on each side, which can be easily removed with knife cutter or pliers. This adaptation enables housing to be build in various frame formats with two different depths. With regard to frame used you may remove fin for housing to fit in. RFID module should not be positioned close to conductive areas (e.g.: metal frames and metal cover plate).


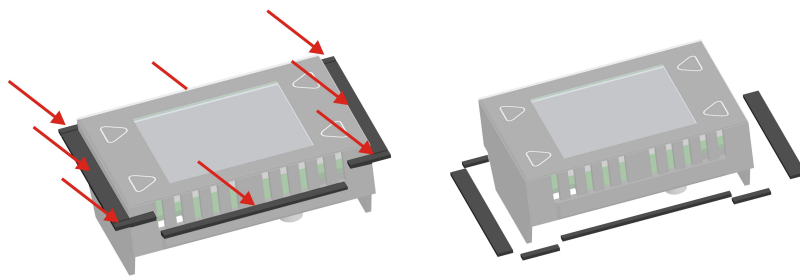


Figure 3: Module with removable fin.



4.3 Mounting instructions

Figure 4: Housing dimensions

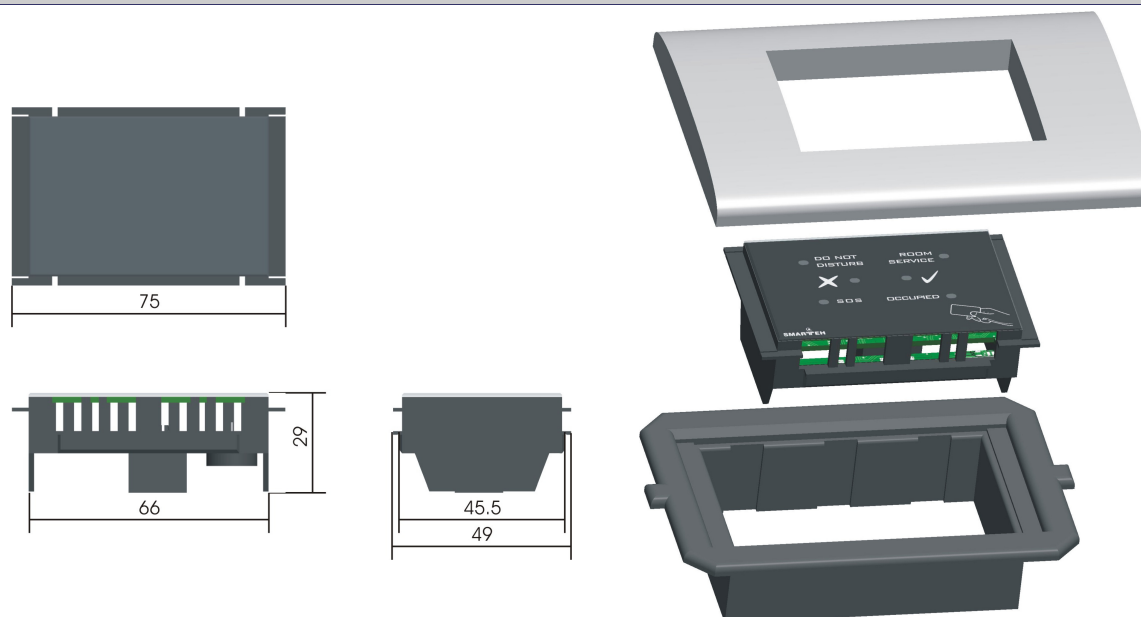

Dimensions in millimeters.



All connections, module attachments and assembling must be done while module is not connected to the main power supply.

Module should not be mounted outdoors.

Several RFID panels should not be mounted close to each other. Minimum distance to next panel is at least 30 cm. This restriction also applies in case of mounting panels on both sides of the same wall. Adequate shielding material and provisions could be used to avoid interference between panels.

RFID panel should not be positioned close to conductive areas (e.g.: metal frames and metal cover plate).

Mounting instructions:

1. Set the correct LMP-1.CA1M settings (refer to the Table 2 and Table 8).
2. Connect LMP-1.CA1M with appropriate cable to the connector K1, Modbus RTU Master equipment and power supply source (refer to Table 6). Max. allowed tensile force is 30 N.
3. Put the LMP-1.CA1M in mounting frames.
4. Cover LMP-1.CA1M with cover plate.

Modbus RTU settings source is set with DIP switch on the back of the LMP-1.MP1 module (Table 8).

NOTE: Signal wires must be installed separately from power and high voltage wires in accordance with general industry electrical installation standard.



4.4 Module labeling

Figure 5: Label

Label (sample):

XXX-N.ZZZ
P/N: AAABBBCCDDDEEE
S/N: SSS-RR-YYXXXXXXXXXX
D/C: WW/YY

Label description:

1. **XXX-N.ZZZ** - full product name.
 - **XXX-N** - Product family
 - **ZZZ** - product
2. **P/N: AAABBBCCDDDEEE** - part number.
 - **AAA** - general code for product family,
 - **BBB** - short product name,
 - **CCDDD** - sequence code,
 - **CC** - year of code opening,
 - **DDD** - derivation code,
 - **EEE** - version code (reserved for future HW and/or SW firmware upgrades).
3. **S/N: SSS-RR-YYXXXXXXXXXX** - serial number.
 - **SSS** - short product name,
 - **RR** - user code (test procedure, e.g. Smarteh person xxx),
 - **YY** - year,
 - **XXXXXXXXXX** - current stack number.
4. **D/C: WW/YY** - date code.
 - **WW** - week and
 - **YY** - year of production.

Optional

1. **MAC**
2. **Symbols**
3. **WAMP**
4. **Other**





5 TECHNICAL SPECIFICATIONS

Table 9: Technical specifications

| | |
|-----------------------------------|----------------------------|
| Power supply | from main module |
| Interconnection connector type | RJ-12 6/6, 4/6 |
| Power consumption | 1 W |
| RFID type | ISO/IEC 14443 A/MIFARE |
| Max. reading distance | 4 cm |
| Dimensions (W x H x D) | 75 x 49 x 29 mm |
| Weight | 40 g |
| Ambient temperature | 0 to 50 °C |
| Ambient humidity | max. 95 %, no condensation |
| Maximum altitude | 2000 m |
| Mounting position | horizontal |
| Transport and storage temperature | -20 to 60 °C |
| Protection class | IP 20 |





6 CHANGES

The following table describes all the changes to the document.

| Date | V. | Description |
|------------|----|----------------------------------------------------------------------|
| 10.01.2020 | 1 | The initial version, issued as <i>LMP-1.CA1M module UserManual</i> . |





7 NOTES

