

USER MANUAL

 Longo programmable controller LPC-2.SO2
Power Supply module

Version 3

SMARTEH d.o.o. / Poljubinj 114 / 5220 Tolmin / Slovenia / Tel.: +386(0) 388 44 00 / e-mail: info@smarteh.si / www.smarteh.si



Written by SMARTEH d.o.o. Copyright © 2012, SMARTEH d.o.o.

User Manual

Document Version: 003 July 1, 2012





STANDARDS AND PROVISIONS: Standards, recommendations, regulations and provisions of the country in which the devices will operate, must be considered while planning and setting up electrical devices. Work on 100 .. 240 V AC network is allowed for authorized personnel only.

DANGER WARNINGS: Devices or modules must be protected from moisture, dirt and damage during transport, storing and operation.

WARRANTY CONDITIONS: For all modules LONGO LPC-2 - if no modifications are performed upon and are correctly connected by authorized personnel - in consideration of maximum allowed connecting power, warranty of 24 months is valid from the date of sale to the end buyer, but not more than 36 months after delivery from Smarteh. In case of claims within warranty time, which are based on material malfunctions the producer offers free replacement. The method of return of malfunctioned module, together with description, can be arranged with our authorized representative. Warranty does not include damage due to transport or because of unconsidered corresponding regulations of the country, where the module is installed.

This device must be connected properly by the provided connection scheme in this manual. Misconnections may result in device damage, fire or personal injury.

Hazardous voltage in the device can cause electric shock and may result in personal injury or death.

NEVER SERVICE THIS PRODUCT YOURSELF!

This device must not be installed in the systems critical for life (e.g. medical devices, aircrafts, etc.).

If the device is used in a manner not specified by the manufacturer, the degree of protection provided by the equipment may be impaired.

Waste electrical and electronic equipment (WEEE) must be collected separately!

LONGO LPC-2 complies to the following standards:

- EMC: EN 61000-6-3:2007 + A1:2011, EN 61000-6-1:2007, EN 61000-3-2:2006 + A1:2009 + A2: 2009, EN 61000-3-3:2013
- LVD: IEC 61010-1:2010 (3rd Ed.), IEC 61010-2-201:2013 (1st Ed.)

Smarteh d.o.o. operates a policy of continuous development. Therefore we reserve the right to make changes and improvements to any of the products described in this manual without any prior notice.

MANUFACTURER: SMARTEH d.o.o. Poljubinj 114 5220 Tolmin Slovenia







Index

Longo programmable controller LPC-2.SO2

| 1 DESCRIPTION | 1 |
|---|----|
| 2 FEATURES | 2 |
| 3 INSTALLATION | 3 |
| 3.1 Connection scheme3.2 Mounting instructions3.3 Module labeling | 5 |
| 4 TECHNICAL SPECIFICATIONS | 8 |
| 5 CHANGES | 9 |
| 6 NOTES | 10 |



1 DESCRIPTION

LPC-2.SO2 is a power supply module with one selectable voltage output (5.6..12 V DC). It can work in two modes - as voltage output always enabled or as voltage output application enabled. All voltage values 5..12 V DC can be used in both modes. Working modes and voltage values can be set by the DIP switches on the module. In digital output mode it is used for electrical locks or similar devices.

LPC-2.SO2 module is powered from the internal BUS.

Power LED indicates voltage output state (refer to the Table 4).

NOTE: For proper system configuration and data allocation please refer to LPC Composer software help menu.



2 FEATURES

Figure 1: LPC-2.SO2 module

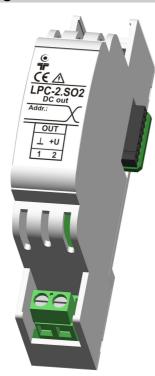


Figure 1: LPC-2.SO2 Power supply module.

Table 1: Technical data

Power supply module with 5.6 \dots 12 V DC output for other devices


Standard DIN EN50022-35 rail mounting




3 INSTALLATION

3.1 Connection scheme

Figure 2: Connection scheme

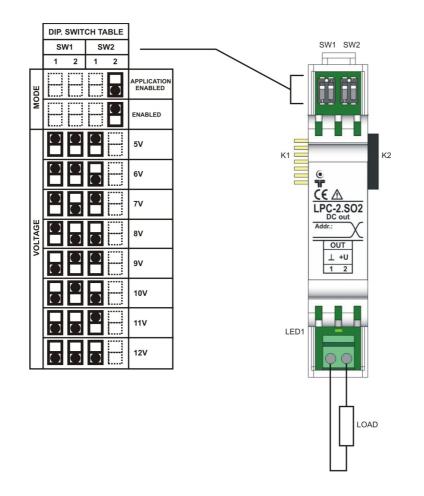

| Table 2: OUT1 ¹ | | |
|----------------------------|-------------------------------------|---------------------------|
| OUT.1 (_) | Ground | Ground |
| OUT.2 (+U) | Supply output in reference to OUT.1 | 5.6 12 V DC supply output |

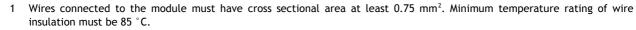




| ply output voltage switch ply output voltage switch | On: Adds 4 V DC to supply output |
|--|---|
| nly output voltago switch | |
| ply output vollage switch | On: Adds 2 V DC to supply output |
| ply output voltage switch | On: Adds 1 V DC to supply output |
| ply output mode switch | On: Enabled Off: Application enabled |
| | |

| Table 4: LED1 | | |
|---------------|--------------|--|
| Status | Output state | LED On: Supply output On LED Off: Supply output Off |



3.2 Mounting instructions

Figure 3: Housing dimensions

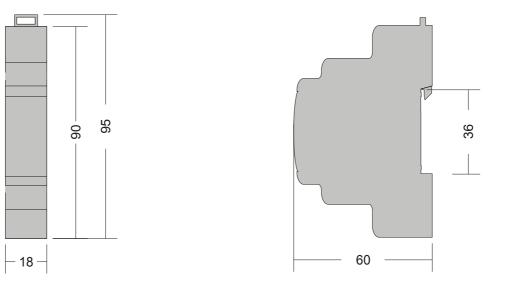

Dimensions in milimeters.

EXTERNAL SWITCH OR CIRCUIT-BREAKER AND EXTERNAL OVERCURRENT PROTECTION: The unit is allowed to be connected to installation with over current protection that has nominal value of 16 A or less.

RECOMMENDATION ON SWITCH OR CIRCUIT-BREAKER PROTECTION: There should be two poles main switch in the installation in order to switch off the unit. The switch should meet the requirements of standard IEC60947 and have a nominal value at least 6 A. The switch or circuit-breaker should be within easy reach of the operator. It should be marked as the disconnecting device for the equipment.



All connections, module attachments and assembling must be done while module is not connected to the main power supply.




Mounting instructions:

- 1. Switch OFF main power supply.
- 2. Mount LPC-2.SO2 module to the provided place inside an electrical panel (DIN EN50022-35 rail mounting). It is recommended that this module is the last one on the right.
- 3. Mount other LPC-2 modules(if required). Mount each module to the DIN rail first, then attach modules together through K1 and K2 connectors.
- 4. Set the DIP switches to appropriate setting(mode,voltage).
- 5. Connect output power supply wires to connectors according to the connection scheme in Figure 2.
- 6. Switch ON main power supply.
- 7. Power (PWR) green LED should switch on according to the Table 4.

Dismount in reverse order. For mounting/dismounting modules to/from DIN rail a free space of at least one module must be left on the DIN rail.


Figure 4: Minimum clearances

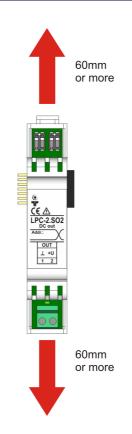

The clearances above must be considered before module mounting.



3.3 Module labeling

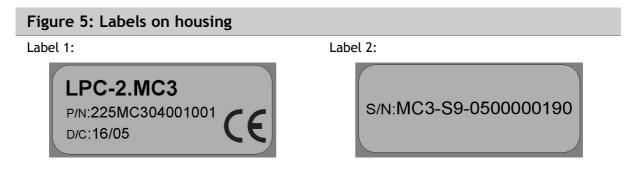

Label 1 description:

- 1. LPC-2.MC3 is the full product name.
- 2. P/N:225MC3040001001 is the part number.
 - 225 general code for LPC-2 product family,
 - MC3 short product name,
 - 04001 sequence code,
 - 04 year of code opening,
 - 001 derivation code,
 - 001 version code (reserved for future HW and/or SW firmware upgrades).
- 3. D/C:16/05 is the date code.
 - 16 week and
 - 05 year of production.

Label 2 description:

- 1. S/N:MC3-S9-0500000190 is the serial number.
 - MC3 short product name,
 - **S9** user code (test procedure, e.g. Smarteh person xxx),
 - 0500000190 year and current stack code,
 - 05 year (last two cyphers),
 - 00000190 current stack number; previous module would have the stack number 00000189 and the next one 00000191.



4 TECHNICAL SPECIFICATIONS

| Table 6: Technical specifications | i |
|-----------------------------------|---|
| Power supply | from internal BUS |
| Max. power consumption | 13 W |
| Output max. power | 0.7 A, 5 W |
| Connection type | screw type connectors for stranded wire 0.75 to 2.5 mm ² |
| Dimensions (L x W x H) | 90 x 18 x 60 mm |
| Weight | 40 g |
| Ambient temperature | 0 to 50 °C |
| Ambient humidity | max. 95 %, no condensation |
| Transport and storage temperature | -20 to 60 °C |
| Pollution degree | 2 |
| Overvoltage category | II |
| Electrical equipment | Class II (double insulation) |
| Protection class | IP 30 |



5 CHANGES

| Date | ۷. | Description |
|-----------|-----|--|
| 1.7.2012 | 003 | CGP General update. |
| 11.5.2010 | 002 | Updated warranty permanence. |
| 14.6.2007 | 001 | The initial version, issued as LPC-2.SO2 power supply module UserManual. |

The following table describes all the changes to the document.

6 NOTES

