

# **USER MANUAL**

 Longo programmable controller LPC-2.TH1 module Temperature Humidity panel

Version 1

SMARTEH d.o.o. / Poljubinj 114 / 5220 Tolmin / Slovenia / Tel.: +386(0)5 388 44 00 / e-mail: info@smarteh.si / www.smarteh.si



Written by SMARTEH d.o.o. Copyright © 2010, SMARTEH d.o.o.

User Manual

Document Version: 001 September 30, 2010





STANDARDS AND PROVISIONS: Standards, recommendations, regulations and provisions of the country in which the devices will operate, must be considered while planning and setting up electrical devices. Work on 100 .. 240 V AC network is allowed for authorized personnel only.

DANGER WARNINGS: Devices or modules must be protected from moisture, dirt and damage during transport, storing and operation.

WARRANTY CONDITIONS: For all modules LONGO LPC-2 - if no modifications are performed upon and are correctly connected by authorized personnel - in consideration of maximum allowed connecting power, warranty of 24 months is valid from the date of sale to the end buyer, but not more than 36 months after delivery from Smarteh. In case of claims within warranty time, which are based on material malfunctions the producer offers free replacement. The method of return of malfunctioned module, together with description, can be arranged with our authorized representative. Warranty does not include damage due to transport or because of unconsidered corresponding regulations of the country, where the module is installed.

This device must be connected properly by the provided connection scheme in this manual. Misconnections may result in device damage, fire or personal injury.

Hazardous voltage in the device can cause electric shock and may result in personal injury or death.

NEVER SERVICE THIS PRODUCT YOURSELF!

This device must not be installed in the systems critical for life (e.g. medical devices, aircrafts, etc.).

If the device is used in a manner not specified by the manufacturer, the degree of protection provided by the equipment may be impaired.

Waste electrical and electronic equipment (WEEE) must be collected separately!

LONGO LPC-2 complies to the following standards:

- EMC: EN 61000-6-3:2007 + A1:2011, EN 61000-6-1:2007, EN 61000-3-2:2006 + A1:2009 + A2: 2009, EN 61000-3-3:2013
- LVD: IEC 61010-1:2010 (3<sup>rd</sup> Ed.), IEC 61010-2-201:2013 (1<sup>st</sup> Ed.)

Smarteh d.o.o. operates a policy of continuous development. Therefore we reserve the right to make changes and improvements to any of the products described in this manual without any prior notice.

MANUFACTURER: SMARTEH d.o.o. Poljubinj 114 5220 Tolmin Slovenia







# Index

# Longo programmable controller LPC-2.TH1 module

1 DESCRIPTION	1
2 FEATURES	2
3 OPERATION	3
3.1 Parameters	3
4 INSTALLATION	4
4.1 Connection scheme example	4
4.2 Mounting frame selection	6
4.3 Mounting instructions	7
4.4 Module labeling	8
5 TECHNICAL SPECIFICATIONS	9
6 CHANGES	10
7 NOTES	11



# **1 DESCRIPTION**

LPC-2.TH1 module is used for room temperature and relative humidity measurement. Module is equipped with temperature and humidity sensor.

All parameters are accessible on module communication port. When panel is connected to the LPC-2 main module, parameters can be viewed with LPC Manager application.



### **2 FEATURES**



Figure 1: LPC-2.TH1 module.

#### Table 1: Technical data

Room temperature measurement

Room relative humidity measurement

Power LED

Internal fault LED



# **3 OPERATION**

### 3.1 Parameters

- Actual temperature: Represent actual room temperature measured by LPC-2.TH1 module in °C. Actual room temperature value -40.00 .. 123.80 °C is represented as -4000 .. 12380 number in main module.
- Actual humidity: Represent actual room relative humidity measured by LPC-2.TH1 module in %. Actual room relative humidity value 0 .. 100 % is represented as 0 .. 100 number in main module.



# **4 INSTALLATION**

### 4.1 Connection scheme example

Figure 2: Connection scheme example

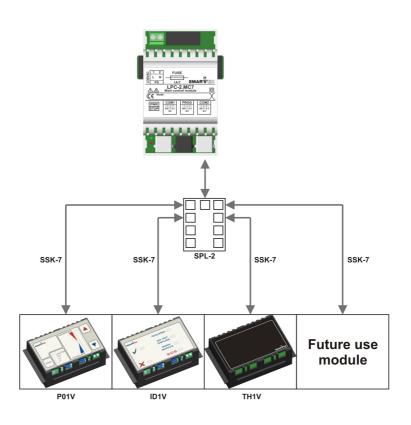






Table 2: K1			
K1.1 G	ND	Ground	
K1.2 7	28 V DC	Power supply input	
K1.3 S	tandard RS-485 A	Data receive/send line A	
K1.4 S	tandard RS-485 B	Data receive/send line B	

### Table 3: LEDs

LED1	Green LED: indicates TH1 power supply	On: OK Off: No power supply
LED2	Red LED: indicates TH1 state	On: RS-485 communication fault Off: RS-485 communication OK

Table 4: S1			
RS-485 ADDRESS	Switch 1	Switch 2	
0	OFF	OFF	
1	OFF	ON	
2	ON	OFF	
3	ON	ON	



### 4.2 Mounting frame selection

Smarteh has verified following lines to be compatible with LPC-2.DP1 module:

- Bticino Living, Light
- Gewiss Playbus, System
- Vimar Plana, Idea
- Tem Modul Soft, Modul Line
- Master

Frames of other vendors most probably suits as well, but they were not verified by Smarteh. Before installation verify compatibility of non listed frames.


Module housing has a fin on each side, which can be easily removed with knife cutter or pliers. This adaptation enables housing to be build in various frame formats with two different depths. With regard to frame used you may remove fin for housing to fit in.





### 4.3 Mounting instructions

#### Figure 3: Housing dimensions

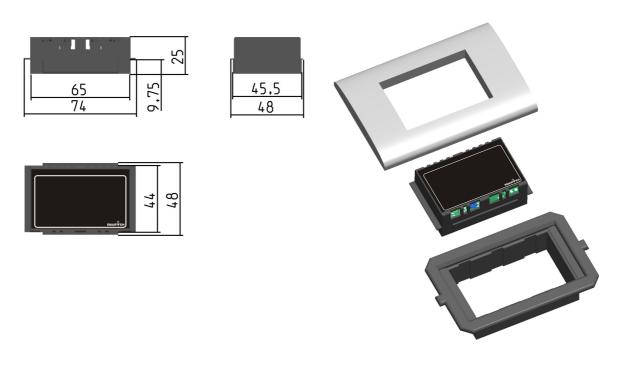

Dimensions in milimeters.



All connections, module attachments and assembling must be done while module is not connected to the main power supply.

Module should be positioned in the wall inside of the room. Avoid direct sunlight or positioning near heating/cooling source object.

Recommended installation height is 1.5 m above floor level.

- 1. Set the correct RS-485 address (S1 switch) for LPC-2.TH1 (refer to the Table 4).
- 2. Connect interconnection cable to the connector K1. Max. allowed tensile force is 30 N.
- 3. Put the LPC-2. TH1 in mounting frames
- 4. Cover LPC-2. TH1 with cover plate

LPC-2. TH1 is connected to the main module with interconnection cable (e.g., SSK-7) which must be ordered together with LPC-2. TH1 module. When more modules (e.g., LPC-2.CR1, LPC-2.CH1, LPC-2.DP2 or up to four LPC-2.DP1) are connected to main module, splitter (e.g., SPL-2) is also required (Figure 2).

Module address on RS-485 network is set with DIP switch on the back of the module (Table 4).

• NOTE: Signal wires must be installed separately from power and high voltage wires in accordance with general industry electrical installation standard.





### 4.4 Module labeling

#### Figure 4: Labels on housing

Label 1 (LPC-2.TH1 module sample):

LPC-2.TH1 P/N:225VV110V01001 D/C: 39/10 Label 2 (LPC-2.TH1 module sample):

S/N: TH1-S9-100000190

#### Label 1 description:

- 1. LPC-2.TH1 is the full product name.
- 2. P/N:225TH110V01001 is the part number.
  - 225 general code for LPC-2 product family,
  - TH1 short product name,
  - 10V01 sequence code,
    - 10 year of code opening,
    - V01 derivation code,
  - 001 version code (reserved for future HW and/or SW firmware upgrades).
- 3. D/C:39/10 is the date code.
  - 39 week and
  - **10** year of production.

#### Label 2 description:

- 1. S/N:TH1-S9-1000000190 is the serial number.
  - TH1 short product name,
  - **S9** user code (test procedure, e.g. Smarteh person xxx),
  - 1000000190 year and current stack code,
    - 10 year (last two cyphers),
    - 00000190 current stack number; previous module would have the stack number 00000189 and the next one 00000191



# **5 TECHNICAL SPECIFICATIONS**

Table 5: Technical specifications	
Power supply	from main module
Interconnection connector type	RJ-12 6/6
Power consumption	0.5 W
Temperature measurement accuracy at 25 $^\circ$ C	+- 0.3 %
Temperature measurement accuracy on the scale value 0 50 °C	+- 1 %
Temperature measurement accuracy on the full scale value -40 123 °C	+- 2.5 %
Relative humidity measurement accuracy on the scale 20 80 %	+- 3 %
Relative humidity measurement accuracy on the full scale value 0 100 %	+- 5 %
Dimensions (W x H x D)	65 x 47 x 25 mm
Weight	35 g
Maximum altitude	2000 m
Mounting position	all directions
Ambient temperature	0 to 50 °C
Ambient humidity	max. 95 %, no condensation
Transport and storage temperature	-20 to 60 °C
Protection class	IP 20



### **6 CHANGES**

The following table describes all the changes to the document.

Date	۷.	Description
30.09.2010	001	The initial version, issued as LPC-2.TH1 UserManual.

# 7 NOTES

