



USER MANUAL

Longo Bluetooth Products LBT-1.DI1 Bluetooth Mesh digital input module





Written by SMARTEH d.o.o. Copyright © 2025, SMARTEH d.o.o.

User Manual

Document Version: 3 November 2025





STANDARDS AND PROVISIONS: Standards, recommendations, regulations and provisions of the country in which the devices will operate, must be considered while planning and setting up electrical devices. Work on 100 .. 240 V AC network is allowed for authorized personnel only.

DANGER WARNINGS: Devices or modules must be protected from moisture, dirt and damage during transport, storing and operation.

WARRANTY CONDITIONS: For all modules LBT-1 - if no modifications are performed upon and are correctly connected by authorized personnel - in consideration of maximum allowed connecting power, warranty of 24 months is valid from the date of sale to the end buyer, but not more than 36 months after delivery from Smarteh. In case of claims within warranty time, which are based on material malfunctions the producer offers free replacement. The method of return of malfunctioned module, together with description, can be arranged with our authorized representative. Warranty does not include damage due to transport or because of unconsidered corresponding regulations of the country, where the module is installed.

This device must be connected properly by the provided connection scheme in this manual. Misconnections may result in device damage, fire or personal injury.

Hazardous voltage in the device can cause electric shock and may result in personal injury or death.

NEVER SERVICE THIS PRODUCT YOURSELF!

This device must not be installed in the systems critical for life (e.g. medical devices, aircrafts, etc.).

If the device is used in a manner not specified by the manufacturer, the degree of protection provided by the equipment may be impaired.

Waste electrical and electronic equipment (WEEE) must be collected separately!

LBT-1 devices are developed considering the following standards:

EMC: EN 303 446-1LVD: EN 60669-2-1

Smarteh d.o.o. operates a policy of continuous development. Therefore we reserve the right to make changes and improvements to any of the products described in this manual without any prior notice.

MANUFACTURER: SMARTEH d.o.o. Poljubinj 114 5220 Tolmin Slovenia











Index

Longo Bluetooth Products LBT-1.DI1

1.ABBREVIATIONS	1
2.TERMINOLOGY	2
3.DESCRIPTION	4
4.FEATURES	5
5.OPERATION	6
5.1.Other digital input module functions	7
5.2.Operation parameters	8
6.INSTALLATION	11
6.1.Connection scheme	11
6.2. Mounting instructions	13
7.SYSTEM OPERATION	16
7.1.Interference warning	16
8.TECHNICAL SPECIFICATIONS	17
9.MODULE LABELING	18
10.CHANGES	19
11.NOTES	20







1. ABBREVIATIONS

LED Light Emitted Diode

PLC Programmable Logic Controller

PC Personal Computer
OpCode Message Option Code
LPN Low Power Node





2. TERMINOLOGY

Mesh Network A network topology where devices communicate with one another to

create a reliable and scalable system, enabling devices to forward

messages within the network.

Provisioning The process of adding a new device to a mesh network by assigning it a

unique unicast address and network keys, ensuring secure

communication with other devices.

Mesh Proxy A device that allows non-mesh devices to interact with a mesh network

by forwarding messages between the mesh network and other devices

that do not support mesh functionality.

Unicast Address A unique identifier assigned to each device in the network, ensuring

that messages are sent to a specific device rather than broadcasted to

all devices.

Group Address An address that represents a group of devices within the mesh network.

Messages sent to a group address are received by all devices in that

group.

Network Key A shared key used by all devices in the mesh network to secure

communication. It is essential for ensuring the confidentiality and

integrity of data in the network.

Application Key A key used for securing application-specific communication within the

mesh network. Each device in the network can have one or more

application keys assigned to it.

Composition Data Data that describes the features, models, and capabilities of a device in

the mesh network. This information is used to inform other devices in

the network about the device's capabilities.

Subscription Address A group address to which devices can subscribe in order to receive

specific messages. This allows devices to act as receivers for

broadcasted data within the mesh.

Friendship A feature in BLE Mesh where one device stores data on behalf of a low-

power device, allowing the low-power device to conserve energy by

sleeping and receiving messages later.

Provisioned Device A device that has been successfully added to the mesh network and has

received its unique address, keys, and other configuration settings.

Provisioning Tool The tool used to configure and provision devices into a mesh network,

including device setup, network key management, and application key

assignment.





Provisioning Success A status indicating that a device has been successfully added to the

network, with its keys and settings properly configured. Smarteh BLE

Mesh Provisioning tool.

Device Binding The process of associating a device with an application key, publication

address, or subscription address to enable specific communication

within the mesh network.

Publication Address An address used by devices to broadcast information to other devices in

the network. It is typically a group address that all devices in the group

can receive.

Opcode A specific operation code used to define actions or commands within

the mesh network, allowing devices to execute predefined functions.

Key Index A reference number used to distinguish different keys used in the mesh

network. It helps to identify the specific key used for security purposes

during communication.

Security Credentials A set of keys and authentication mechanisms used to secure

communication between devices in the mesh network.

Key Refresh A process of changing the network or application key periodically to

enhance security by preventing unauthorized access to the mesh

network.

Message Re-transmit A mechanism in the mesh network to re-transmit messages to ensure

reliability and prevent data loss, typically associated with network

transmit settings like re-transmit count.

Node Provisioned Device connected and talking to Bluetooth mesh network.

The device can be simple node in the network or it can have one or

more network features (LPN, Friend, Relay, Proxy).

Low-power node (LPN) For nodes in the Bluetooth mesh network that are powered with battery

and need to preserve power. They need friend node to receive

messages when they are in low power mode.

Friend node Friend node in the Bluetooth mesh network receives and stores

messages for LPN and delivers them when LPN asks for them.

Relay node Relay nodes in the Bluetooth mesh network re-transmit messages of the

same mesh network that are meant for other nodes so that message can

travel longer distances across mesh network.

Proxy node Proxy node in the Bluetooth mesh network act as bridge between

Bluetooth mesh network and normal Bluetooth network. It is used to

connect to Bluetooth mesh network.







3. DESCRIPTION

LBT-1.DI1 Bluetooth Mesh digital input module is a module to extend Bluetooth Mesh network. It also has two switch inputs that can be used to control other modules in the network. The module can operate with a wide range of DC and AC voltages. Due to its small size it can be installed in a 60 mm diameter flush mounting box.

LBT-1.DI1 Bluetooth Mesh digital input module can only operate with Smarteh LBT-1.GWx Modbus RTU Bluetooth Mesh gateway connected to the same Bluetooth Mesh network. LBT-1.GWx Modbus RTU gateway is connected to the main control device as Smarteh LPC-3.GOT.012 7" PLC based Touch panel, any other PLC or any PC with Modbus RTU communication. Besides Smarteh Bluetooth Mesh devices, other standard Bluetooth Mesh devices can be integrated into above mentioned Bluetooth Mesh network. More than a hundred Bluetooth Mesh devices can be provisioned and can operate in a single Bluetooth Mesh network.





4. FEATURES

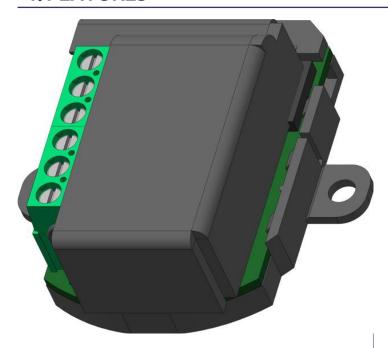


Figure 1: LBT-1.DI1

Table 1: Technical data

Communication standard: Bluetooth Mesh is a low power wireless mesh protocol and allows device to device communication and device to main control device communication.

Radio frequency: 2.4 GHz

Radio range for direct connection: < 30m, depending on application and building. By using Bluetooth Mesh topology, much bigger distances can be achieved.

Power supply: 11.5 .. 13.5 V DC or 90 .. 264 V AC, 50/60Hz

Ambient temperature: 0 .. 40 °C

Storage temperature: -20 .. 60 °C

Status indicators: red and green LED

Bluetooth Mesh network repeater

2 switch digital inputs

Mounting in flush mounting box





5. OPERATION

LBT-1.DI1 Bluetooth Mesh window sensor can operate over Bluetooth mesh network with Smarteh LBT-1.GWx Modbus RTU Bluetooth Mesh gateway, while provisioned to the same Bluetooth Mesh network. LBT-1.DI1 acts as a **Relay and Friend node** in a Bluetooth mesh network.

Figure 2: LBT-1.DI1 device connection


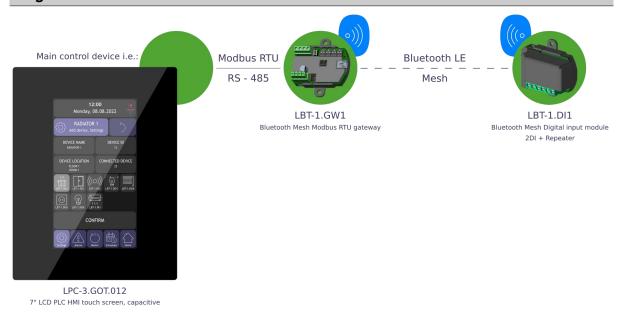


Figure 3: Bluetooth Mesh system topology





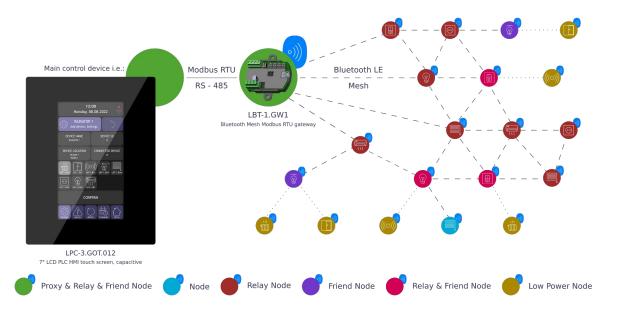

5.1. Other digital input module functions

• Factory reset: This function will delete all Bluetooth Mesh network parameters stored on LBT-1.DI1 digital input module and will restore to the conditions of the initial programming, ready for provisioning. See Table 5 for more information.





5.2. Operation parameters

LBT-1.DI1 Bluetooth Mesh digital input module accepts a set of operation codes as specified in below tables 2 to 4.

LBT-1.DI1 Bluetooth Mesh digital input module is communicating with the main control device as Smarteh LPC-3.GOT.012 or similar via Smarteh LBT-1.GWx Modbus RTU Bluetooth Mesh gateway. All communication between the main control device is performed by using Modbus RTU communication. Individual Bluetooth Mesh node configuration data should be observed by using the network provisioning tool.

Tab	Table 2: 4xxxx, Holding registers, Modbus RTU to Bluetooth Mesh gateway		
Reg.	Name	Description	Raw → Engineering data
10	Execute command	Execute command for Read and/or Write by toggling bit	Bit0 toggle → Write Bit1 toggle → Read
11	Destination address*	Destination node address. Can be a unicast, group or virtual address	0 65535 → 0 65535
12	Element index*	Sending node model element index	0 65535 → 0 65535
13	Vendor ID*	Vendor ID of the sending node model	0 65535 → 0 65535
14	Model ID*	Model ID of the sending node model	0 65535 → 0 65535
16	Virtual address index*	Index of the destination Label UUID	0 65535 → 0 65535
17	Application key index*	The application key index used	0 65535 → 0 65535
18	Option code**	Refer to the option code table	$063 \rightarrow 063$
19	Payload byte length**	Refer to the option code table	1 $10 \rightarrow 1$ 10 bytes
20	Payload word[0]**	Refer to the option code table	$0 65535 \rightarrow 0 65535$
21	Payload word[1]**	Refer to the option code table	0 65535 → 0 65535
22	Payload word[2]**	Refer to the option code table	0 65535 → 0 65535
23	Payload word[3]**	Refer to the option code table	0 65535 → 0 65535
24	Payload word[4]**	Refer to the option code table	0 65535 → 0 65535

^{*} Observed from network provisioning tool



^{**} User defined parameters, refer to the option code table



Table 3: 3xxxx, Input registers, Modbus RTU to Bluetooth Mesh gateway			
Name	Description	Raw → Engineering data	
Messages pending	Number of messages pending in receiving buffer	1 10 → 1 10	
Destination address	Destination node address. Can be a unicast, group or virtual address	0 65535 → 0 65535	
Element index	Sending node model element index	0 65535 → 0 65535	
Vendor ID	Vendor ID of the sending node model	0 65535 → 0 65535	
Model ID	Model ID of the sending node model	0 65535 → 0 65535	
Source address	Unicast address of the node model which sent the message	0 65535 → 0 65535	
Virtual address index	Index of the destination Label UUID	0 65535 → 0 65535	
Application key index	The application key index used	0 65535 → 0 65535	
Option code	Refer to the option code table	0 63 → 0 63	
Payload length	Refer to the option code table	1 10 → 1 10 bytes	
Payload word[0]	Refer to the option code table	0 65535 → 0 65535	
Payload word[1]	Refer to the option code table	$0 65535 \rightarrow 0 65535$	
Payload word[2]	Refer to the option code table	$0 65535 \rightarrow 0 65535$	
Payload word[3]	Refer to the option code table	0 65535 → 0 65535	
Payload word[4]	Refer to the option code table	0 65535 → 0 65535	
	Name Messages pending Destination address Element index Vendor ID Model ID Source address Virtual address index Application key index Option code Payload length Payload word[0] Payload word[1] Payload word[3]	Name Description Messages pending Number of messages pending in receiving buffer Destination address Destination node address. Can be a unicast, group or virtual address Element index Sending node model element index Vendor ID Vendor ID of the sending node model Model ID Model ID of the sending node model Source address Unicast address of the node model which sent the message Virtual address index Index of the destination Label UUID Application key index The application key index used Option code Refer to the option code table Payload word[0] Refer to the option code table Payload word[1] Refer to the option code table Payload word[2] Refer to the option code table Payload word[3] Refer to the option code table	

Table 4: LBT-1.DI1 digital input output option codes			
Option code	Name	Description	Raw → Engineering data
1	FW version status	Firmware version status	0 65535 → 0 65535
2	Operation mode set	Node operation mode selection	0 → Not used 1 → Not used 2 → Not used 3 → Not used 4 → Reset 5 → Factory reset
9	Wake up interval command	Command to set the time interval in which the device wakes up and sends data about the current and voltage status	0 65535 → 0 65535 s





Table 4: LBT-1.DI1 digital input output option codes			
10	Wake up interval status	Status of the time interval in which the device wakes up and sends data about the current and voltage status	0 65535 → 0 65535 s
41	Digital input 1 status	Status of digital input S1	0 → OFF 1 → ON
42	Digital input 2 status	Status of digital input S2	0 → OFF 1 → ON







6. INSTALLATION

6.1. Connection scheme

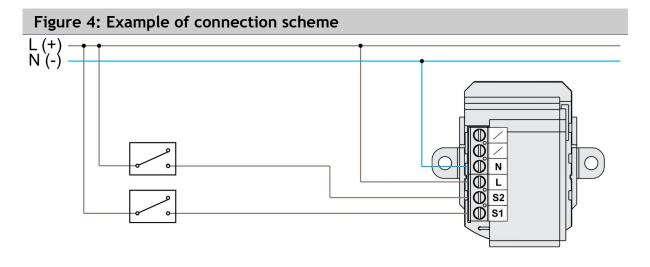






Figure 5: LBT-1.DI1 module

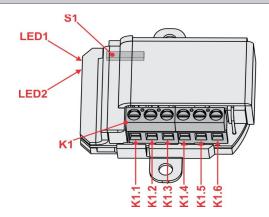


Table 5: Inputs, Outputs and LEDs			
K1.1	/	N.C.	
K1.2	1	N.C.	
K1.3	N	Power supply input: neutral or GND, 90 264 V AC or 11.5 13 V DC	
K1.4	L	Power supply input: line or positive (+), 90 264 V AC or 11.5 13 V DC	
K1.5	S2	Switch input 2: line, 90 264 V AC, 11.5 13.5 V DC	
K1.6	S1	Switch input 1: line, 90 264 V AC, 11.5 13.5 V DC	
LED1: red	Error	2x blink inside 5 s time period = network/friend lost 3x blink inside 5 s time period = unprovisioned node	
LED2: green	Status	1x blink = normal operation. It's also feedback for S1 reed contact, when activated with magnet.	
S1	Reed contact	Mode setting contact Inside 5 s time window, perform corresponding number of swipes in duration of not less than 200 ms with permanent magnet close to the window sensor S1 reed contact position. Following window sensor action or mode will be set:	
		Number of swipes Action	
		4 Reset 5 Factory reset	
		A hardware reset is triggered if reed contact is continuously closed with a permanent magnet for more than 5 seconds.	









6.2. Mounting instructions

Figure 6: Housing dimensions

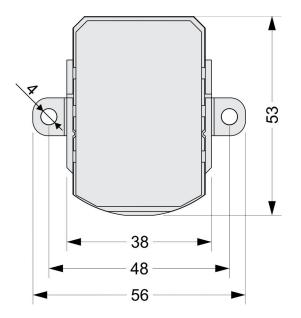



Dimensions in millimeters.





Figure 7: Mounting in flush mounting box

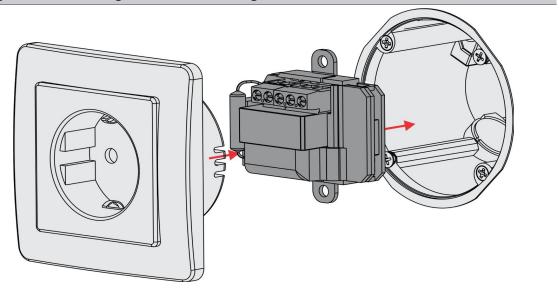






Figure 8: Installation flowchart

Switch off main power supply. Mount repeater module to the provided place. Switch on main power supply. Check that i.e. LBT-1.GW1 Modbus RTU Bluetooth Mesh gateway is ready for opration. Red LED blinking. 3 x blinks = unprovisioned node After few seconds Provisioning the device sensor should connect to the using provisioning SW tool provisioned Bluetooth for the first time. netowrk. YĖS YES-Device connect to the provisioned Bluetooth -NO netowrk or to the friend YES Green LED. Red LED. 2 x blinks = Network/friend lost. 1 x blink = Sensor is ready to use.





- 1. Switching Off the main power supply.
- When you mount the module inside the flush mounting box first check, that the flush
 mounting box is depth enough.

 If needed please use an additional spacer between the flush mounting box and the socket or
 contact the producer for additional information.
- 3. Mount the module up to the provided place and wire the module according to the connection scheme in Figure 4. When you connect the module to the traditional electrical wiring for lighting please be sure, that you wired the bridge on the last switch before the LBT-1.Dl1 module as shown in Figure 4.
- 4. Switching On the main power supply.
- After a few seconds Green or Red LED starts to blink, please see the flowchart above for details.
- 6. If the module is not provisioned Red LED will blink 3x, the provisioning procedure has to be started. Contact the producer for more details*.
- 7. Once provisioning is finished, the module will continue with the normal mode of operation and this will be indicated as Green LED blinking once per 10 seconds.

Dismount in reverse order.

*NOTE: Smarteh Bluetooth Mesh products are added and connected to a Bluetooth Mesh network by using standard provisioning and configuration mobile apps tool such as nRF Mesh or similar.

Please contact producer for more detail information.





7. SYSTEM OPERATION

LBT-1.DI1 Bluetooth Mesh digital input module can switch power to the output load based on power supply voltage drop pulse, based on switch input voltage change or based on Bluetooth Mash command.

7.1. Interference warning

Common sources of unwanted interference are devices that generate high frequency signals. These are typically computers, audio and video systems, electronic transformers, power supplies and various ballasts. The distance of the LBT-1.DI1 digital input module to the above mentioned devices should be at least 0.5 m or greater.

WARNING:

- In order to protect plants, systems, machines and network against cyber threats it is necessary to implement and continuously maintain up to date security concepts.
- You are responsible for preventing unauthorized access to your plants, systems, machines and networks and they are allowed to be connected to the Internet only, when security measures like firewalls, network segmentation, etc. are in place.
- We strongly recommend the updates and usage of the latest version. Usage of the version that is no longer supported may increase the possibility of cyber threats.







8. TECHNICAL SPECIFICATIONS

Table 6: Technical specifications		
Power supply	11.5 13.5 V DC 90 264 V AC, 50/60 Hz	
Fuse	1 A (T-slow), 250 V	
Max. power consumption	1.5 W	
Connection type	Screw type connectors for stranded wire 0.75 to 2.5 mm2	
RF communication interval	Minimum 0.5 s	
Dimensions (L x W x H)	53 x 38 x 25 mm	
Weight	50 g	
Ambient temperature	0 40°C	
Ambient humidity	Max. 95 %, no condensation	
Maximum altitude	2000 m	
Mounting position	Any	
Transport and storage temperature	-20 to 60 °C	
Pollution degree	2	
Over voltage category	II	
Electrical equipment	Class II (double insulation)	
Protection class	IP 10	





9. MODULE LABELING

Figure 9: Label

Label (sample):

XXX-N.ZZZ.UUU

P/N: AAABBBCCDDDEEE S/N: SSS-RR-YYXXXXXXXX

D/C: WW/YY

Label description:

- 1. XXX-N.ZZZ full product name,
 - * XXX-N product family,
 - * ZZZ.UUU product,
- 2. P/N: AAABBBCCDDDEEE part number,
 - * AAA general code for product family,
 - BBB short product name,
 - CCDDD sequence code,
 - CC the year of code opening,
 - **DDD** derivation code,
 - EEE version code (reserved for future HW and/or SW firmware upgrades),
- 3. S/N: SSS-RR-YYXXXXXXXX serial number,
 - * SSS short product name,
 - RR user code (test procedure, e.g. Smarteh person xxx),
 - YY year,
 - * XXXXXXXX current stack number,
- 4. D/C: WW/YY date code,
 - WW week and,
 - * YY the year of production.

Optional:

- *MAC*,
- Symbols,
- WAMP,
- · Other.





10. CHANGES

The following table describes all the changes to the document.

Date	٧.	Description
30.11.25	3	Make some style changes, replace figure 4.
21.02.25	2	Added terminology chapter, more descriptive image of mesh network and node functions description.
10.05.24	1	The initial version, issued as LBT-1.DI1 digital input module User Manual.







11.NOTES

